



HTC Evo 4G MicroSD card Replacement

MicroSD card replacement.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace your current MicroSD card.

TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Panel



- Gently insert an iPod opening tool between the rear panel and the inner rear frame near the headphone jack.
- Use your iPod opening tool to pry up the rear case around the perimeter of the Evo.

Step 2



- Lift the rear panel off of the inner rear frame.

Step 3 — Battery




- Using the tip of your finger, lift the battery from the end closest to the camera.
- Remove the battery from the rear inner frame.

Step 4 — MicroSD card



- Use the flat end of a spudger to pry up the red MicroSD retainer attached to the inner frame.

 The retainer will move about 1 mm and stop. Do not attempt to completely remove the MicroSD card retainer.

Step 5



- Use a pair of tweezers to carefully pull the MicroSD card out of its slot in the inner rear frame.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:11:26 AM.